


WAPAP404

LightTech




IT) E' necessario l'intervento di personale professionale per tutti i prodotti che necessitano di installazione.
EN) The assistance of professional staff is necessary for all parts which require installation.
ES) Se necesita que sea montado por profesionales para todos los productos que necesitan instalación.
FR) L'assistance d'un professionnel est nécessaire pour toutes les pièces qui nécessitent une installation.
DEU) Der Eingriff von Fachpersonal ist notwendig für alle Artikel die installiert/montiert werden müssen.

VERIFICARE SERRAGGIO VITI PRIMA DELL'UTILIZZO
CONTROL THE THIGHTENING'S SCREW BEFORE USING

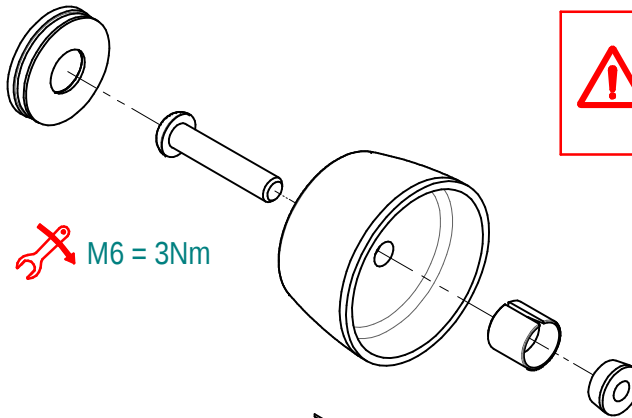



M6 = 3Nm

TAMPONE SCARICATO Ø13
HOLLOWED PAD

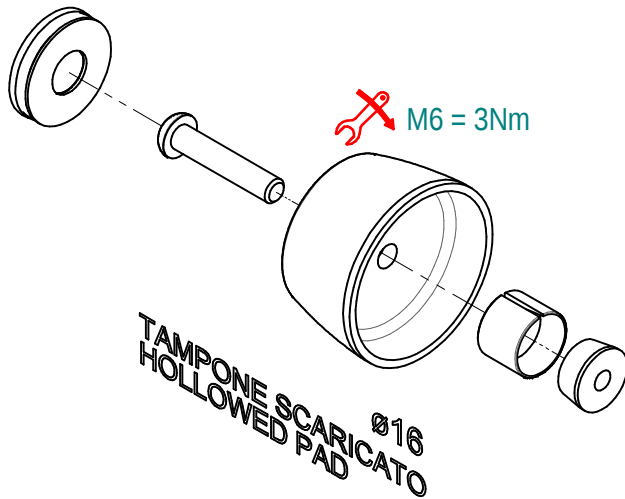


M6 = 3Nm

TAMPONE SCARICATO Ø16
HOLLOWED PAD

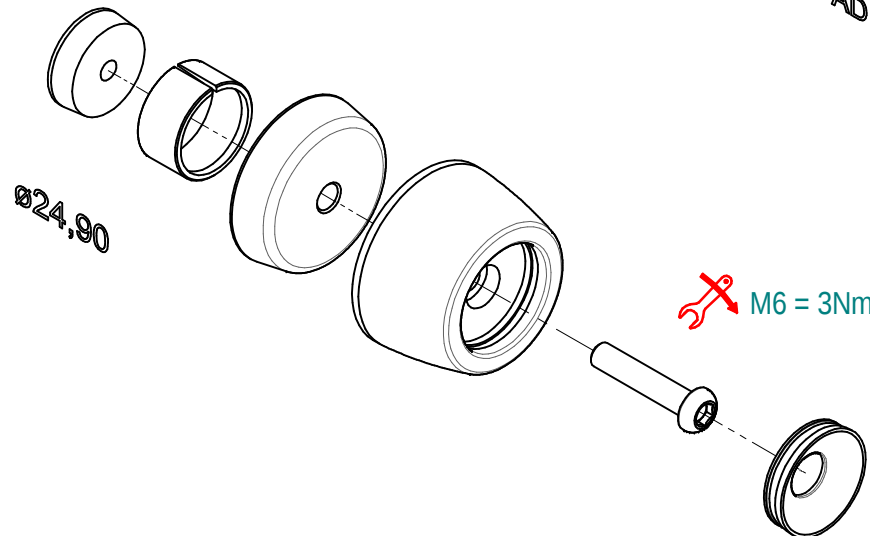

M6 = 3Nm

Ø24,90

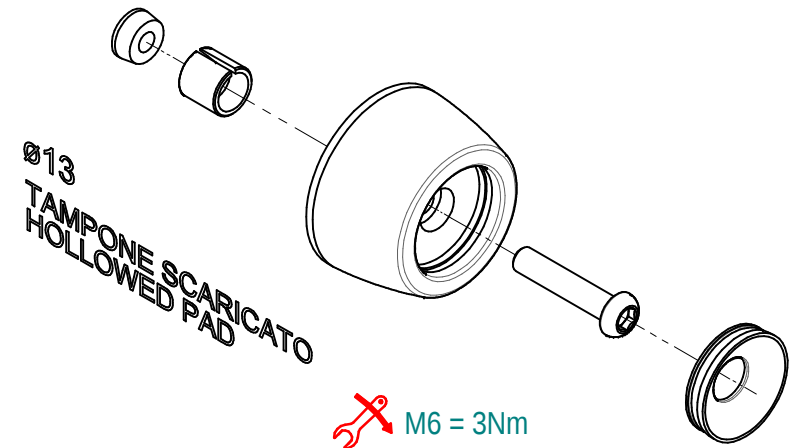

M6 = 3Nm

Ø13
TAMPONE SCARICATO
HOLLOWED PAD